


BETWS-1490-FM-FA Bariatric Toilet Siphon Jet Series Wall Outlet

✓	MODEL NUMBER	INLET LOCATION
	BETWS-1490-FM-FA-BS	BACK
	BETWS-1490-FM-FA-TS	TOP*

* Top inlet shown in drawing

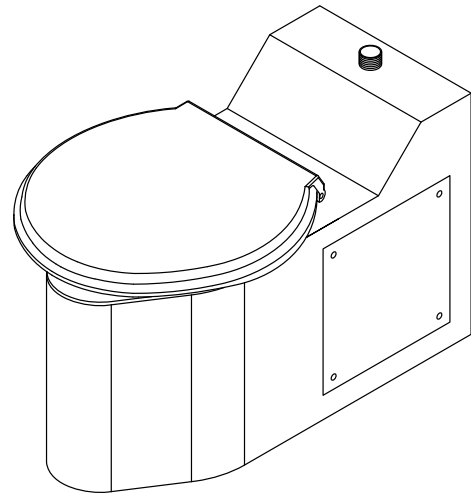

Recommended Specifications

Toilet shall be Willoughby Model No. **BETWS-1490-FM-FA-__** (select from table above).

Fixture shall be fabricated from heavy gauge, type 304 stainless steel. The construction shall be all-welded. Fixture exterior shall have a gloss white powder coat enamel finish. Toilet bowl interior shall have a sanitary bead blast stainless steel finish.

Standard toilet shall include: elongated toilet bowl with integral contoured seat, integral crevice-free self-draining flushing rim with positive afterfill and fully enclosed 2 1/2" O.D. trap which shall maintain a minimum 3 1/2" seal and pass a 2 1/8" ball. Toilet shall be siphon jet type which requires 25 psi minimum flushing pressure. Hinged toilet seat shall have open front with cover and be rated for 1200 lbs. weight capacity. Toilet seat hinges shall be stainless steel, seat and cover shall be white in color.

Fixture (less hinged seat) shall withstand loadings up to 2,000 lbs. with no measurable deflection and loadings up to 5,000 lbs. with no permanent damage.

Anchoring shall be from the front thru two (2) 12"x12" removable access panels. The fixture is provided with four (4) 7/8" wall carrier mounting holes and one (1) floor mounted Z-Clip mounting bracket. Wall and floor anchoring hardware by others. The fixture is floor mounted and is designed to mate with a four (4) bolt siphon-jet carrier.

On back to back fixture installations, do not use standard cross type waste fittings: cross flow may result due to blowout jet action. Use sanitary or offset type waste fittings.

Visit our website at <http://www.willoughby-ind.com>

2210 West Morris Street • P.O. Box 21217 • Indianapolis, IN 46221
(317) 638-2381 • Fax: (317) 638-6110 • (800) 428-4065

MODEL NUMBER AND OPTIONS:

1.) Toilet Waste Location:

BETWS Wall

2.) Base Model Number:

1490

3.) Fixture Mounting:

FM Floor Mounted

4.) Front Access:

FA Front Access

5.) Inlet Location:

BS Back Spud

TS Top Spud


6.) Options:

- BL Bed Pan Lugs
- SLL Seat Less Lid (For Use W/Bed Pan Washer)
- FV Flush Valve
- FVC Flush Valve Cover (Top Spud)
- FVT Flush Valve Connection
- AP Flush Valve Access Panel
- LF Low-Flow, 1.6 Gallon Flush (standard)
- SF Standard-Flow, 3.5 Gallon Flush
- MT Metal Template
- RTH1 Wall Mounted Recessed Tissue Holder
- RTH2 Wall Mounted Recessed Tissue Holder (Front Access)
- Other: _____
- Other: _____

Drawing Approved For Manufacturing By: _____ Date: _____ Company: _____

Wall Thickness: _____ Wall Type: _____

VERIFY ALL DIMENSIONS PRIOR TO ROUGH-IN

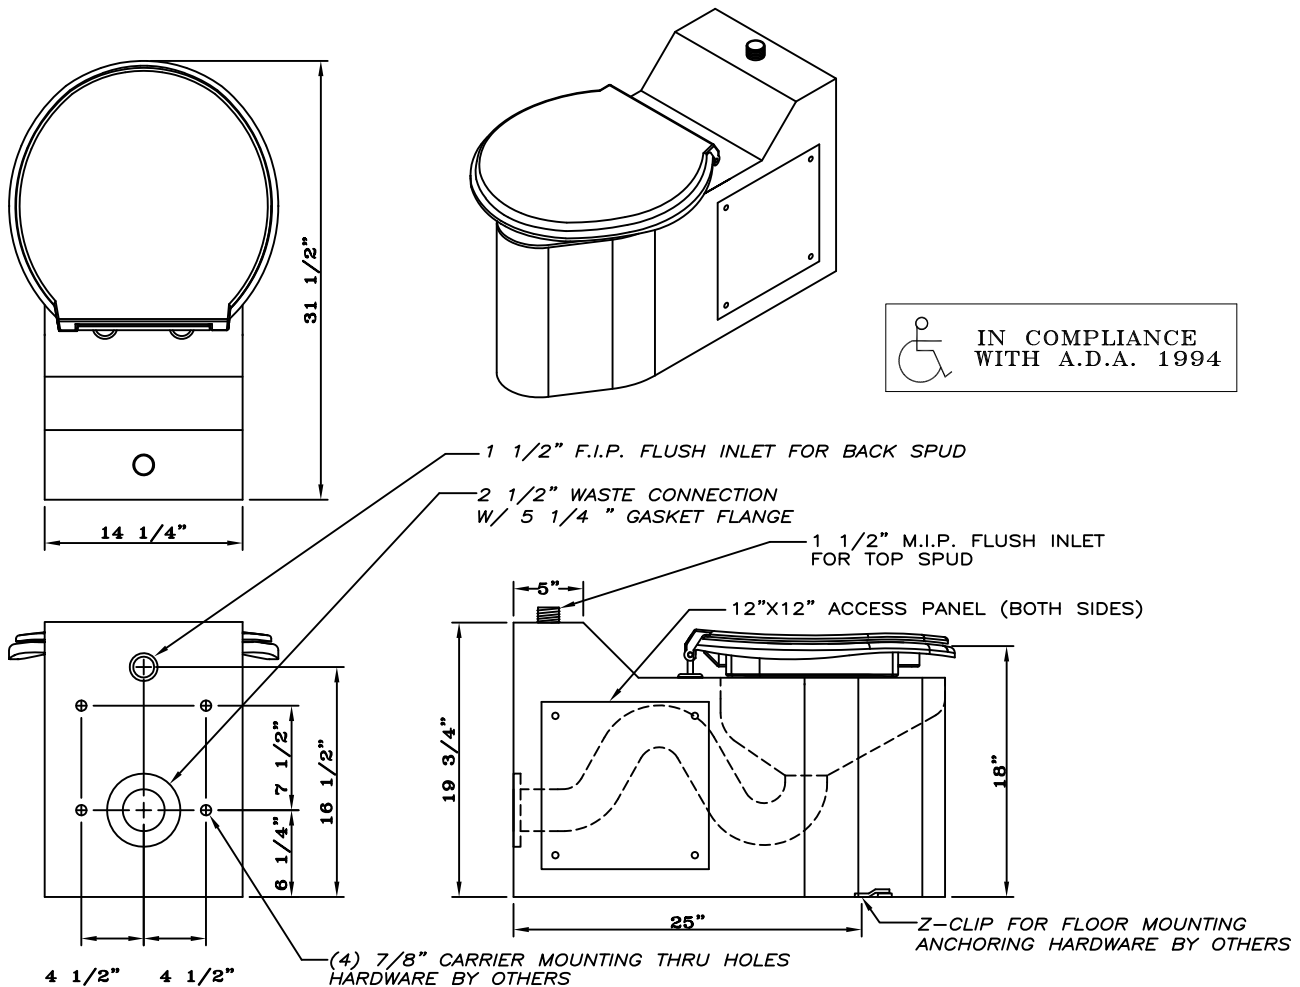

Willoughby Industries, Inc.