
Willoughby Industries - Healthcare Products

BETF-1490-FM-FA Front Access Floor Outlet Siphon Jet Series Bariatric Toilet



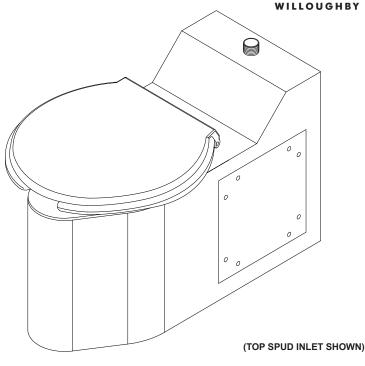

IN COMPLIANCE WITH A.D.A. 2010

Recommended Specifications

Front Access, Floor Outlet, Siphon Jet Series Bariatric Toilet shall be: Willoughby Model No. **BETF-1490-FM-FA** (Select from model number and options list on next page)

Fixture shall be fabricated from heavy gauge, Type 304 stainless steel. The construction shall be all-welded. Fixture exterior shall have an antimicrobial gloss white powder coat enamel finish*. Toilet bowl interior shall have a sanitary bead-blast stainless steel finish.

Standard toilet shall include: elongated toilet bowl with integral contoured seat, integral crevice-free self-draining flushing rim with positive afterfill and fully enclosed 2-1/2" O.D. trap which shall maintain a minimum 3-1/2" seal and pass a 2-1/8" ball. Toilet shall be siphon jet type which requires 35 psi minimum flushing pressure. Hinged toilet seat shall have open front with cover and be rated for a 1200 pound weight capacity. Toilet seat hinges are stainless steel, seat and cover shall be white in color.

The fixture (less hinged seat) shall withstand loadings up to 2000 pounds with no measurable deflection and loadings up to 5000 pounds with no permanent damage.

To specify fixture and accessories, use the Model Number and Options page. Example: To specify a Front Access, Floor Outlet, Siphon Jet Series Bariatric Toilet with back spud, flush valve and wall mounted recessed tissue holder

Use the following Willoughby Model Number: BETF-1490-FM-FA-BS-FV-RTH1

Anchoring shall be from the front thru (2) 12" x 12" removable access panels. The fixture is provided with four (4) 3/4" wall carrier mounting holes and one (1) floor mounted 'Z' clip mounting bracket. Wall and floor anchoring hardware is by others.

*Antimicrobial properties are built-in to inhibit the growth of bacteria that may affect this product. The antimicrobial properties do not protect users or others against bacteria, viruses, germs, or other disease organisms. Always use good hygienic cleaning practices.



visit our website at www.willoughby-ind.com 5105 West 78th Street ● Indianapolis, IN. 46268 (317) 875-0830 ● Fax: (317) 875-0837 ● (800) 428-4065

MODEL NUMBER AND OPTIONS:

1.) Base Model Number:

BETF-1490-FM-FA

Front Access, Floor Outlet, Siphon Jet Series Bariatric Toilet

2.) Inlet Location:

BSBack SpudTSTop Spud

3.) Flush Valve GPF's (Must Specify):

- □ 1.28 GPF HET
- □ 1.6 GPF ULF (Standard)
 □ 3.5 GPF (3" Waste Tube Required)

4.) Options:

4.) Options.	
🖵 BL	Bedpan Lugs
SLL SLL	Seat Less Lid
🗆 FV	Flush Valve
ASFVCADA	Ligature-resistant ADA Flush Valve Cover (Top Spud Only)
G FVT	Flush Valve Connection
□ AP	Flush Valve Access Panel
D MT	Metal Template
RTH2	Front Access Wall Mounted Recessed Tissue Holder
Other:	
Other:	

