Willoughby Industries - Healthcare Products

CWSSS Series Commercial Surgical Scrub Sink



To specify fixture and accessories, use the Model Number and Options page.

Example: To specify a single station Commercial Surgical Scrub Sink with standard temp/pressure-balancing mixing valve, standard knee-activated water actuator, and in-wall mounting carrier

Use the following Willoughby Model Number: CWSSS-1-TPV-KA-MC

Recommended Specifications

Commercial Surgical Scrub Sink shall be: Willoughby Model No. **CWSSS** (Select from model number and options list on next page)

Fixture shall be fabricated from 14 GA, Type 304 stainless steel. The construction shall be all-welded with exposed exterior stainless steel surfaces polished to a #4 satin finish. Bowl shall have a bead-blast finish.

Standard equipment shall include:

- Knee-activated mechanical pilot-type water valves, activated by one push of a knee-operated front panel and turned off by a second push of the panel
- Faucet panel-mounted temperature/pressure mixing valves
- Gooseneck faucets with laminar flow nozzles
- Machined stainless steel drain with tailpiece
- 1-1/2" F.I.P. slip joint, cast brass union 'P' trap

Anchoring shall be from the front with 'Z' clip and wall anchoring hardware (by others); a wall mounting carrier or mounting base is available as optional equipment. Unit requires no chase area for installation and maintenance.

Units are provided with front panels which are easily removed for access to valves and waste connections.

Optional Features:


- IR- Infrared Sensor Actuated Water Valves
- Mounting Carrier
- Mounting Base
- · Liquid Soap Dispensers- Knee-activated, Hydraulic
- Storage Shelf
- · Light Module- with Built-in Storage Shelf
- Digital Time Display
- Swing-down Eye Wash Stations



MODEL NUMBER AND OPTIONS:

1.) Base Model:		5.) Mounting Options:		
CWSSS	Commercial Surgical Scrub Sink		'Z' Clips (Wall anchors by others) (Standard)	
		□ MC	Mounting Carrier (off-floor installation)	
2.) Number of Stations:		■ MB	Mounting Base (on-floor installation)	
1	Single Station			
2	Two Station (with 1 Divider Panel)	6.) Option:	6.) Options:	
□ 3	Three Station (with 2 Divider Panels)	☐ LSD	Liquid Soap Dispensers (Knee-activated hydraulic)	
		■ LM	Light Module w/ Storage Shelf	
3.) Temperature Controls:			(Field-wired to 120V-15A wall switch, by others)	
■ TPV	Temperature/Pressure-balancing Mixing Valves -Above Deck (Standard)	SHLF	Storage Shelf	
□ PBV	Pressure-Balancing Mixing Valves- Above Deck	DTD	Digital Time Display*	
■ TMV	Inline Thermostatic Mixing Valves	SDEW	Swing Down Eye Wash (Mixing valve by others)	
		Other:		
4.) Water Actuators:		Other:		
□ KA	Knee-activated Actuators (Standard)			
□ IR	Infrared Sensor Actuators*	*(Req. 11	10V power through ground fault interrupter (GFCI) receptacle)	

*(Req. 110V power through ground fault interrupter (GFCI) receptacle)

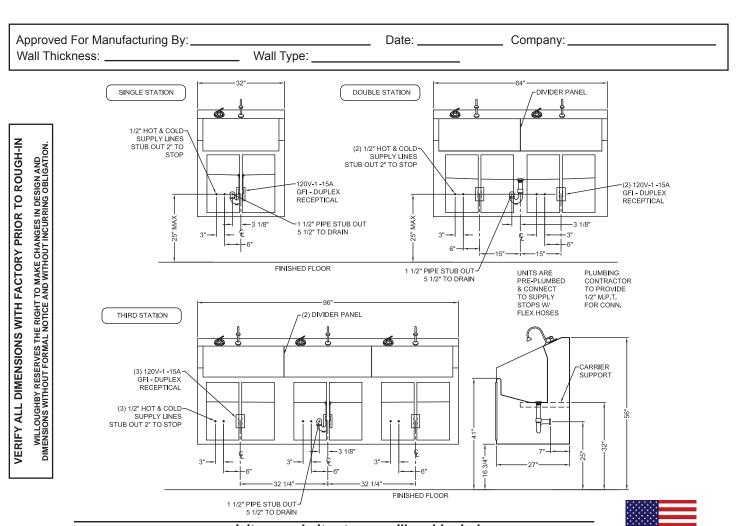

visit our website at www.willoughby-ind.com 5105 West 78th Street • Indianapolis, IN. 46268 (317) 875-0830 • Fax: (317) 875-0837 • (800) 428-4065

© Rev. 3/2016

MADE IN THE U.S.A.